



RECOMMENDED INSTALLATION GUIDE (for Recycle Hood)

- A. CABINET LAYOUT
 - 1. without Cabinet Door

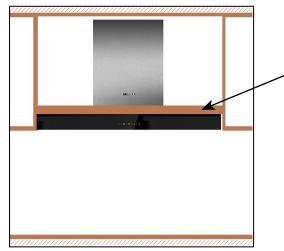

ADD: Removeable cabinet shelf on top of the hood.

2. with Cabinet Door

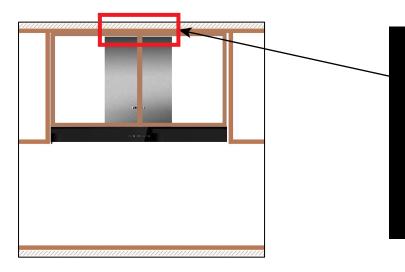

Make ventilation hole on top of cabinet.

*In this case, you have to remove Air Channel Kit.

*Extra Parts needed: 1. U-bracket, to book the upper piece stainless Steel Decorative Cover.

***REMARK:** This document served as a guidance/reference only.